


## Installing the Stealth Access Panel Frame:



1. Frame out location of the panel.

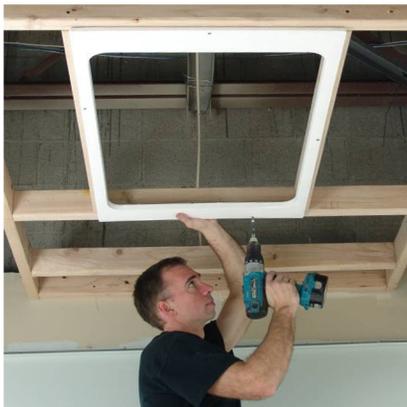

2. Affix panel frame by screwing it into ceiling frame using pre-marked divots.



3. Hang drywall around the panel frame.

## Finishing After Drywall Installation:



1. Apply drywall mud base, covering seams and screws.



2. Apply drywall tape, also covering seams and screws.



3. Smooth drywall tape and compound with a taping knife.



4. Apply second layer of mud and smooth with a taping knife.



5. Once dry, smooth tape joints and install your panel door.